

*BioBidet*TM
Operating Instructions

BB-300H



*BioBidet*TM
Union Conception International Inc.
205 Berg Street, Algonquin IL. 60102, U.S.A.
Phone: 847.854.7292 Fax: 847.854.1296
E-mail: uci@biobidet.com

**THIS UNIT WAS MANUFACTURED FOR HOUSEHOLD USE.
READ ALL OPERATING INSTRUCTIONS BEFORE INSTALLATION
AND USE.**

1. Notes for installation

- 1) This product is intended for professional installation only.
- 2) Please read this manual carefully and install properly.
- 3) Please give this manual to the customer after installation.

2. Notes to customers

- 1) Please read this manual carefully and use this unit properly.
- 2) Please keep this manual for future reference.

CONTENTS	
I . IMPORTANT SAFEGUARDS	2
II . CAUTIONS BEFORE INSTALLATION	3
III . PARTS IDENTIFICATION	4
IV . INSTALLATION	5-6
V . BEFORE OPERATION	7-8
VI . TRIAL OPERATION	9
VII . OPERATION	10
VIII . MAINTENANCE	11-12
IX . SPECIFICATIONS	13
X . WARRANTY CARD	14

I

IMPORTANT SAFEGUARDS

When using electrical products, especially when children are present, basic safety precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING

DANGER – To reduce the risk of electrocution:

1. Do not place or store product where it may fall or be pulled into a tub or sink.
2. Do not immerse in water or other liquid.
3. Do not reach for the product if it does fall into the water. Unplug immediately.


WARNING – To reduce the risk of burns, electrocution, fire, or injury to persons.

1. Close supervision is necessary when this product is being used in households with children, elderly, or persons with disabilities. Children should not be permitted to use or touch this product. Do not leave children unattended in a room where this product has been installed.
2. Use this product only for its intended purposes as described in this manual. Do not use attachments not recommended by the manufacturer.
3. Never operate this product if it has a damaged cord or plug, not working properly, has been dropped, damaged, or dropped into water.
4. Install the unit properly by following the installation procedure.
5. Only authorized persons should install or repair the unit.
6. Keep the cord away from heated surfaces.
7. Never drop or insert any object into any opening or hose.
8. Do not use outdoors, where aerosol spray products are being used, or where oxygen is being administered.
9. Always follow the grounding instructions in this booklet before plugging in the unit.

SAVE THESE INSTRUCTIONS

A. Attaching the Nozzle Plate to the Toilet


1. Unfasten the nuts of the toilet seat to remove the toilet seat.
2. Put the nozzle plate on the toilet.
3. Align the center of the nozzle plate with the toilet, then tighten the nuts securely.

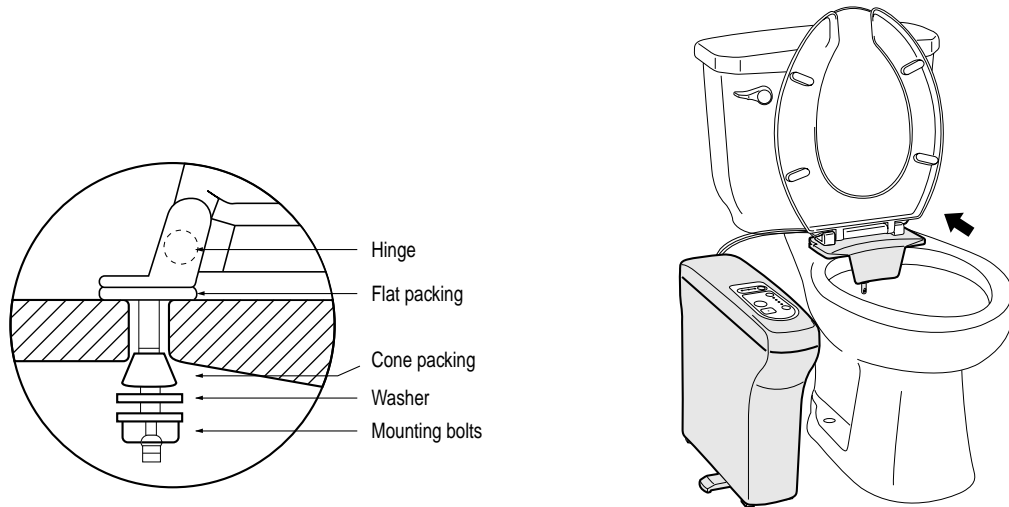


B. Installing the Main Unit to the Toilet

- 1 Turn off the water at the shutoff valve (Please refer to the diagram on the following page).
- 2 Flush the toilet twice to empty the bowl and tank. Place a small pan below the shutoff valve and the fill valve to catch any water left in pipes then unfasten fill valve nut.
- 3 If your existing pipe "A" is a copper pipe, replace it with our flexible hose A.
- 4 If water supply pipe connection is 3/8", use the conversion nut and the packing to attach the branching valve. In some cases, the water supply pipe connection may be 1/2" in which case the conversion nut may be omitted.
- 5 Connect the hose A to the branching valve and tighten. You may need to use a valve coupling nut. (see note below)

Note: Check the condition of the flexible hose. If it is cracked, worn, or damaged, do not use it. Replace the damaged hose before installing the unit. Also, if your toilet is equipped with a non-flexible pipe, please replace the pipe with an appropriate flexible hose. (The size of the valve coupling nut fitting is either 3/8" or 1/2". Take your existing pipe to a plumbing/hardware store to get the proper size of the flexible hose.)

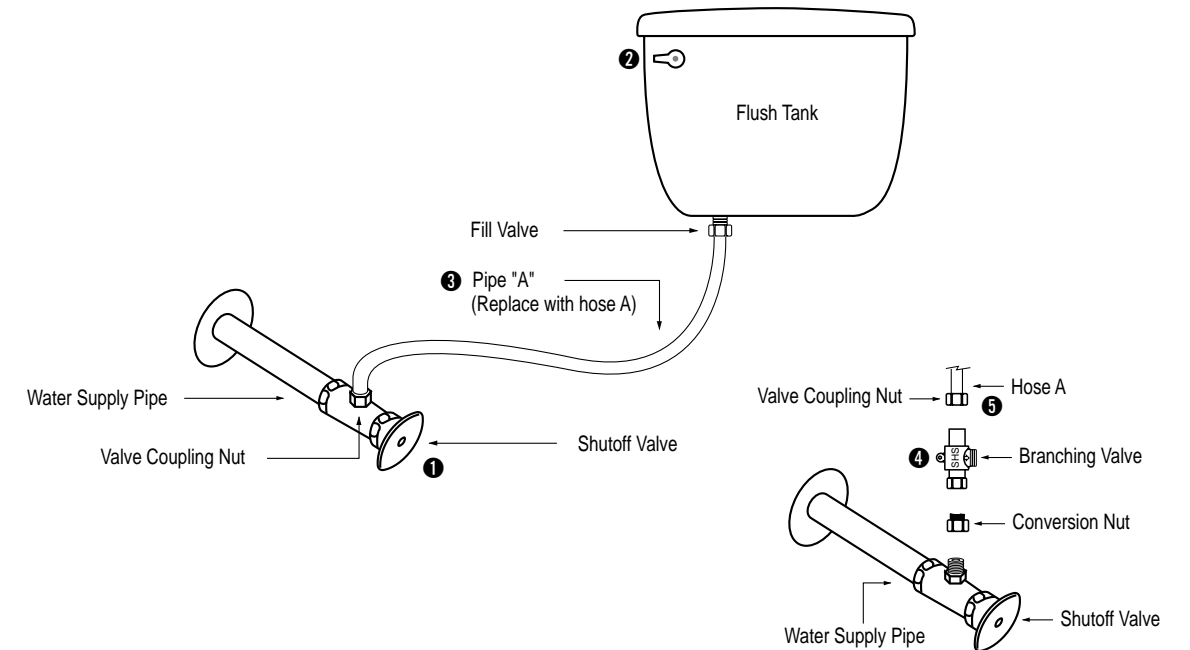

C. Connecting the Water Supply to the Main Unit

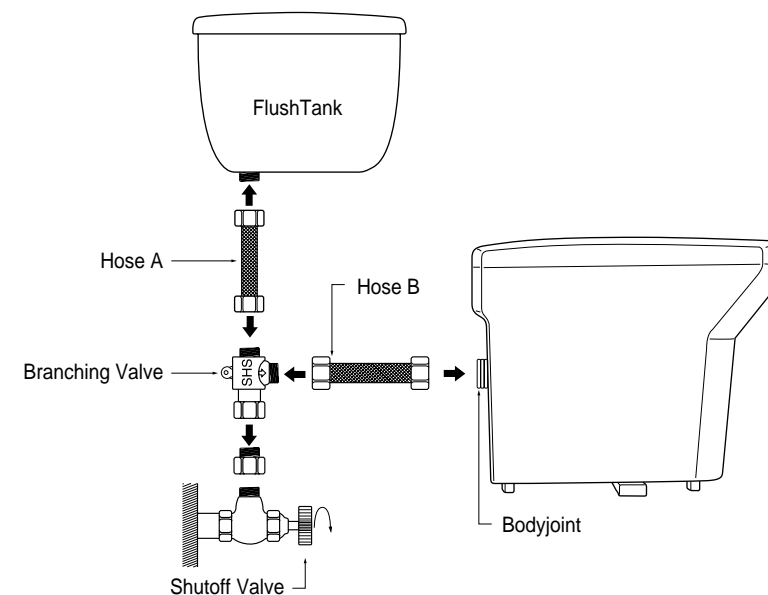

Use the hose B to connect the body joint of the main unit to the branching valve. Tighten the coupling nuts at the body joint and the branch outlet.

NO	ITEM	BB-300H
1	Power Rating Power Cord	AC 120V~60Hz 630W 4ft (1.2m)
2	Warm Water Flow Rate Temperature Settings Heater Safety Features Supply Water Pressure	14 - 33 oz/mim Room Temp., 85°F, 95°F, 104°F 600W Thermal Fuse Float Switch Thermal Switch 1Minute Auto Shut-off 0.5-7.5kgf/cm ²
3	Dimension & Weight	4.3" (W) × 14.6" (H) × 18.2" (L) 10 lbs
4	Ambient Temperature	40°F to 104°F

WARRANTY

One Year Warranty

The manufacturer carefully tests every *BioBidet™* before shipment. *BioBidet™* made with highest quality materials in the highest standard of production and workmanship, is guaranteed to be free of defects.

The warranty is good for one year from purchase date.

Warranty Excludes the Following:

1. Replacement of parts due to discoloration from cleaning chemicals or mineral content in water.
If you live in an area with strong minerals in the water, manufacturer recommends using a water filter.
2. Replacement due to damage or malfunction caused by improper installation, negligence, misuse or abuse.
3. Replacement due to improper installation.
4. Manufacturer is not responsible or liable for any damages caused by improper installation or by use of parts which were not supplied by manufacturer.

Only the original purchaser may submit a claim under this limited warranty. To activate your warranty, complete this form:

Purchase Date _____ Purchased From _____
 Invoice # _____ Amount Paid _____ Serial # _____
 Name _____
 Address _____ City _____ State _____ Zip _____
 Phone () _____ - _____ Fax () _____ - _____ E-mail _____

Mail, email or fax the warranty form to :

UCI, 205 Berg Street,
 Algoquin IL, 60102
 email to support@biobidet.com
 fax to 847-854-1296
 Keep a copy for your records.

Questions: Call Customer Service @ 847-854-7292

Great Products for Your Healthy Living!®